



User Guide

4110XM

Always press keys firmly.
Never give anyone your master code.

- On Away - Enter 4-digit code + 2
AWAY *Motion Detectors are ON with this option
- On Stay - Enter 4-digit code + 3
STAY * Motion Detectors are OFF with this option
- Off - Enter 4-digit code + 1 * This may cancel signals during accidental alarms
OFF
- Bypass Zone - Enter 4-digit code + 6 + 2-digit zone # & wait for display of zone #
BYPASS (You may then arm the system)
- Chime On - Enter 4-digit code + 9 * Use same method to disable chime
CHIME

*** Remember to test your system weekly ***

Phone: 678 209 0500

After Hours: 678 482 7211

Email: customercare@4bulldog.com

*** Remember to test your system weekly ***

Always press keys firmly.
Never give anyone your master code.

- On Max - Enter 4-digit code + $\boxed{4}$ _{MAX} All on no entry delay on doors
- Instant - Enter 4-digit code + $\boxed{7}$ _{INSTANT} Motions off and no entry delay on doors
- Reset System - Enter 4-digit Master code + $\boxed{1}$ _{OFF} - 2 times consecutively
- + User Code - Enter 4-digit Master code + $\boxed{8}$ _{CODE} + 1-digit user # + New 4-digit code
(User #'s range from 2-7)
- User Code - Enter 4-digit Master code + $\boxed{8}$ _{CODE} + 1-digit user # wait for beep
- New Master Code - Enter Master code + $\boxed{8}$ _{CODE} $\boxed{1}$ _{OFF} + new 4-digit Master code twice
(System will beep once)

Phone: 678 209 0500
After Hours: 678 482 7211
Email: customercare@4bulldog.com

4110XM