

* Remember to test your system weekly *



User Guide

Phone: 678 209 0500
 After Hours: 678 482 7211
 www.bulldoghomeseecurity.com



FIRE Panic Button- *immediate dispatch*



MEDICAL Panic Button- *immediate dispatch*



POLICE Panic Button- *immediate dispatch*

Troubleshooting: www.bulldoghomeseecurity.com/dsc

On Away - Press and hold NOTE: Motion detectors are ON with this option

On Stay - Press and hold NOTE: Motion detectors are OFF with this option

Off - Enter 4-digit code

Add User Code - * 5 + MASTER CODE + USER NUMBER + USER CODE + #
(User #'s range from 01 -39)

Delete User Code * 5 + MASTER CODE + USER NUMBER + * #

Door Chime – to turn chime on or off - Press and hold

New Master Code - * 5 + CURRENT MASTER CODE + 4 0 + NEW MASTER CODE + #

Reset clock - * 6 + MASTER CODE + 1 + HOUR* MINUTES* MONTH DAY YEAR #
Enter as 1 continuous stream of digits *Hour and minutes in 24 hr format i.e. 4:00 PM = 16:00

System trouble condition present- Press * 2 To display trouble condition

Trouble Condition	Action	Service item	Action
1 Service required	Press 1 for more info/ see chart >>	1 low battery	Replace system battery backup*
2 loss of system AC pwr	Check circuit breakers and power	2 siren trouble	service@bulldoghomeseecurity.com
3 telephone line fault	Ensure phone line is operable	3 sys trouble	service@bulldoghomeseecurity.com
4 failure to communicate	Send test signals to reset	4 tamper trouble	service@bulldoghomeseecurity.com
5 sensor/zone fault	Check zone items	5 mod trouble	service@bulldoghomeseecurity.com
6 sensor /zone tamper	service@bulldoghomeseecurity.com	6 RF trouble	service@bulldoghomesecurity.com
7 sensor low battery	Replace wireless component batts	7 pc5204 trouble	service@bulldoghomesecurity.com
8 loss of time and date	Reset clock: directions below	8 5204ac trouble	service@bulldoghomesecurity.com

* If you have recovered from a recent power outage, battery may recharge. Wait 24 hours and recheck before replacing

System not ready- Press To display open zone and close item to rectify

Check alarm memory - Press * 3 Keypad will display the violated zone